

Service Manual

For the complete PDF manual
please visit www.LaserPros.com.

HP LaserJet 2100

© Copyright
Hewlett-Packard Company
1999

All Rights Reserved.
Reproduction, adaptation, or
translation without prior written
permission is prohibited,
except as allowed under the
copyright laws.

Publication number
C4170-90959

First edition, February 1999

Trademark Credits

Adobe and PostScript are
trademarks of Adobe Systems
Incorporated which may be
registered in certain
jurisdictions.

Windows is a U.S. registered
trademark of Microsoft
Corporation.

Warranty

The information contained in
this document is subject to
change without notice.

Hewlett-Packard makes no
warranty of any kind with
regard to this material,
including, but not limited to, the
implied warranties or
merchantability and fitness for
a particular purpose.

Hewlett-Packard shall not be
liable for errors contained
herein or for incidental or
consequential damages in
connection with the furnishing,
performance, or use of this
material.

WARNING

Electrical Shock Hazard

To avoid electrical shock, use
only supplied power cords and
connect only to properly
grounded wall outlets.

Conventions

This manual uses the following conventions:

The names of major printer parts and assemblies are Capitalized.

Color is used to emphasize items which are important to the material under discussion.

Bold is used for emphasis, particularly in situations where *italic* type would be confusing.

Italic type is used to indicate related documents or emphasis.

NOTE:

Notes contain important information set off from the text.

CAUTION:

Caution messages alert you to the possibility of damage to equipment or loss of data.

WARNING!

Warning messages alert you to the possibility of personal injury.

Chapter Descriptions

Chapter 1: Product Information

This chapter describes features of the printer, including locations of external and internal assemblies, and gives safety and regulatory information. Use this chapter to form a basic service approach, and to get technical assistance.

Chapter 2: Operating Requirements

Chapter 2 details site requirements, including space and environmental specifics. The chapter also defines specifications for paper and other media with this printer.

Chapter 3: Printer Configuration

Learn to use the control panel, perform an engine test, and reset the printer. Chapter 3 contains options for configuring the printer through service mode, and also details about installing and using the Remote Control Panel. Network and IR printing is also explained.

Chapter 4: Printer Maintenance

This chapter discusses service check points, procedures for cleaning the printer, and how to use toner cartridges effectively.

Chapter 5: Functional Overview

The functional overview discusses each of the printer's stages to form and develop an image. This chapter details the engine control system, the formatter system, the paper feed system, and the sequence of printer operation.

Chapter 6: Troubleshooting

Use the systematic troubleshooting process to solve printing problems. This process contains a preliminary troubleshooting flowchart, with explanations of each step throughout the chapter. Explanations include a table with descriptions and recommended actions for all control panel messages, image defect samples, troubleshooting problems with media, and diagrams showing the locations of components that may be causing problems.

Chapter 7: Removal and Replacement

Step-by-step procedures show how to replace field replaceable units (FRUs) in the printer.

Chapter 8: Parts and Diagrams

Exploded view drawings and part number listings are included for all replaceable parts in the printer. The composite table of replaceable parts is sorted alphabetically by part name, and also sorted numerically by part number. Both tables are cross-referenced to the diagrams in the chapter.

Index

The index is an alphabetical, cross-referenced listing of information found in the main body of the manual.

Contents

Conventions	3
1 Product Information	
Printer Description and Features	2
Identification	4
Specifications	5
Product Overview	6
External Assembly Locations	6
Internal Assembly Locations	8
Safety Information	9
Laser Safety	9
Laser Statement for Finland	9
LED Safety	10
Declaration of Conformity	11
Toner Safety	12
Ozone Emission	12
Environmental Product Stewardship Program	13
Protecting the Environment	13
FCC Regulations	15
Service Approach	16
Bench Repair Warranty	16
HP Express Exchange	16
Ordering Parts	16
Ordering Consumables	17
Ordering Related Documentation	17
Technical Assistance	18
HP ASAP	18
HP FIRST	18
HP AUDIO-TIPS	19
HP Support	19
Customer Support Worldwide	20
Worldwide Sales and Service Offices	21
2 Operating Requirements	
Site Requirements	26
Operating Environment	26
Printer Space Requirements	27
Media Specifications	28
General Media Specifications	28
Guidelines for Selecting Paper	29
Media Input Options	30
Tray 1 Media Sizes	31
Tray 2 and Optional Tray 3 Paper Sizes	32
Envelope Specifications	32
Label Specifications	35
Transparency Specifications	36
Storing Print Media	36
Shipping Print Media	37
Fillers	37

Testing Media Specifications	37
--	----

3 Printer Configuration

Using the Control Panel	44
Display LEDs	44
Job Cancel Button	44
Go Button	44
Printing Demo Page	45
Printing Self-Test/Configuration Page	46
Continuous Self-Test	47
Engine Test.	48
Service Mode	49
Accessing Service Mode	49
Setting the Page Count	51
Setting the Cold Reset Default	51
Resetting the Printer	52
Cold Reset	52
NVRAM Initialization.	52
Remote Control Panel.	53
Installing the Remote Control Panel.	53
Network Printing	54
Installing an HP JetDirect EIO Card	54
IR Printing	55

4 Printer Maintenance

Service Check Points	58
Cleaning the Printer	59
General Cleaning	59
Internal Cleaning	60
Toner Cartridge Information	62
Storage	62
Handling Instructions	63
Refilled Toner Cartridges	64
Recycling Toner Cartridges	64
Toner Cartridge Weights	65
Toner Cartridge Life Expectancy	65
Saving Toner with EconoMode	65
Redistributing the Toner	66

5 Functional Overview

Sequence of Operation	68
Power On Sequence	69
Timing Diagram.	70
Printer Functionality and Operation	71
Formatter System	72
Formatter Hardware	73
Formatter Subsystems	73
Resolution Enhancement technology (REt - 600 dpi only).	73
Print Density Adjustment	73
EconoMode (600 dpi only)	74
Memory Management	75
Printer Job Language (PJL) Overview	76
Engine Control System	77
Laser Scanner Control	78

Paper Feed Control	78
Microswitch Control	78
Motor Control	78
Fusing Assembly Control	79
Power Supply and Control	79
Image Formation System	80
Toner Cartridge	81
Cleaning Stage	82
Conditioning Stage	82
Writing Stage	83
Developing Stage	84
Transferring Stage	85
Fusing Stage	85
Paper Pick and Feed System	87
Paper Detection	88
Paper Size Detection	88
Paper Jam Detection	88

6 Troubleshooting

Troubleshooting Process	90
Preliminary Operating Checks	90
Basic Fault Isolation	90
Troubleshooting Process Flow	92
Power On	93
Troubleshooting with Control Panel Messages.	94
Control Panel LED Messages	94
Paper Handling Problems.	105
Print Test Pages.	105
Engine Test	105
Self-Test / Configuration Page	105
Paper Jam Troubleshooting	105
Media and Paper Handling Problems.	108
Evaluate the Test Pages.	109
Status Log Messages.	109
Verify installed options	109
Image Formation Troubleshooting	110
Half Self-Test Functional Check.	127
Drum Rotation Functional Check	128
Media Troubleshooting	129
A Paper or Printer Problem?	129
Isolate a Paper Path.	129
Isolate a Paper Brand.	130
Isolate a Paper Type	132
Evaluate Paper User Practices	137
Evaluate Environmental Conditions	137
Communication Troubleshooting	139
Communications Check	139
Test Message.	139
EIO Troubleshooting	139
JetDirect Configuration.	140
Reference Diagrams.	141
Timing Diagram	141
Sensors and Signals	142
Component Locations	144

7 Removal and Replacement

Removal and Replacement Strategy	152
Required Tools	153
Parts Removal Tree	154
Toner Cartridge Removal	156
Tray 2 Removal	157
Transfer Roller Removal	158
Tray 2 Pickup Roller Removal	161
Tray 2 Pickup Roller Replacement	166
I/O Cover Removal	170
EIO Card Removal	171
DIMM Cover Removal	172
DIMM Removal	173
Formatter PCB Removal	174
EIO Shield and Guide Removal	176
Rear Cover Removal	177
Fusing Assembly Removal	179
Fusing Assembly Replacement	182
Fusing Film Removal	183
Pressure Roller Removal	185
Engine Controller Assembly Removal	186
Top Cover Removal	189
Upper Output Delivery Roller Removal	192
Lower Output Delivery Roller Removal	194
Laser Scanner Assembly Removal	195
Transport Belts and Rollers Removal	197
Transport Belts and Rollers Replacement	199
Ribbon Cable Harness Removal	202
Printer Drive Assembly Removal	204
Main Motor Removal	206
Motor Plate Removal	207
Printer Drive Assembly Gear Removal	208
Tray 1 Pickup Roller Assembly Removal	209
Tray 1 Separation Pad Assembly Removal	212
Tray 1 Paper Sensor Lever Removal	214
Tray 1 Paper Sensor Lever Replacement	216
Tray 1 Solenoid Removal	218
Tray 2 Pickup Roller Assembly Removal	219
Tray 2 Solenoid Removal	221
Intermediate PCB Removal	222
Registration Assembly Removal	225
Fusing Assembly Ground Clip Replacement	227
Tray 3 Assembly Connector Removal	228
Left Cover Removal	229
Cooling Fan Removal	230
Toner Cartridge Guide Removal	232
Tray 1 Removal	234
Tray 1 Pickup Roller Removal	237
Tray 1 Separation Pad Removal	240
DC Bias Voltage Contacts (Leaf Springs) Removal	242
DC Bias Voltage Contacts Replacement	245
Tray 3 Cassette Assembly Removal	247
Tray 3 Pickup Roller Removal	248
Tray 3 Paper Feeder Drive Assembly Removal	249
Tray 3 Solenoid Removal	251

8 Parts and Diagrams

External Covers and Panels	254
Top Cover Assembly	256
Internal Components	257
Fuser	263
Printer Drive Assembly	265
Paper Feeder Drive Assembly	267
Paper Tray	269
Paper Tray Pickup Assembly	271
Paper Tray External Covers	273
Paper Tray Internal Components	275
Hardware Table	277
Alphabetical Parts List	279
Numerical Parts List	286

For the complete PDF manual
please visit www.LaserPros.com.